


USER MANUAL

Rechargeable LED light, light source: 5W CREE XPG + 3W COB, Power source: 2xLi-Ion 18650 (3,7V/4000mAh) included

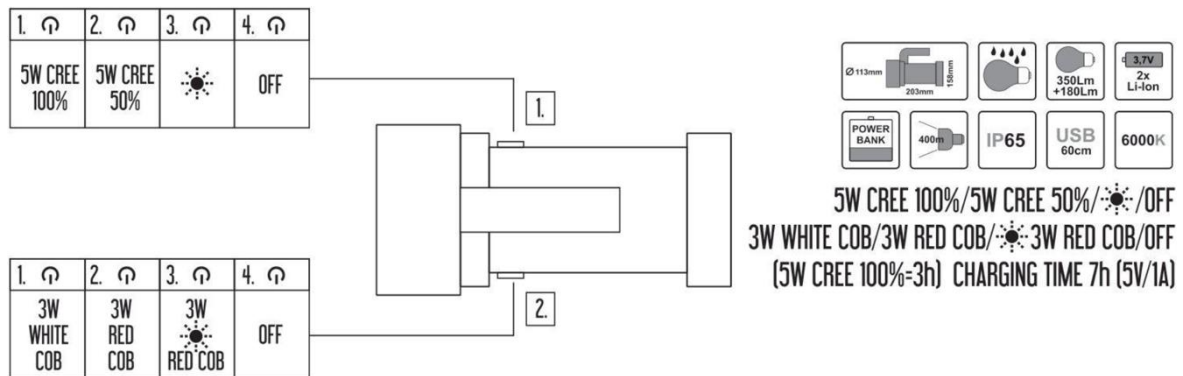

Rechargeable LED light

Light source: 5W CREE XPG (350lm) + 3W COB (180lm)

Modes:

- / 5W CREE 100% / 5W CREE 50% / 5W CREE / off
- / 3W white COB / 3W red COB / 3W red COB / off

Power of source: 2 x 18650 Li-Ion 3,7V/4000mAh

Charging time: 7 hours (fully charged cell)

Lighting time (fully charged): 5W CREE 100% - 3 hours (non-stop)

Before using the product for the first time, please read the instructions for use below and retain them for later reference.

This appliance may not be used by persons with impaired physical, sensory, or mental capabilities.

Before cleaning, turn off the lamp. Use a soft, dry, or damp cloth for cleaning. Do not use an aggressive cleaning agent. The LED light sources in the flashlight cannot be changed!

Do not look directly into the light of the LEDs, or direct the light at reflective surfaces!

Charge the flashlight's battery before first use. Charge the flashlight in dry indoor spaces at a temperature of +5 °C to 45 °C. The battery self-discharges and must be recharged at least once every 3 months to prevent voltage drop and possible destruction. If the flashlight does not light up or lights up weakly, charge the flashlight immediately. If the battery is damaged or destroyed due to non-observance of the above rules, the warranty claim will not be accepted. Do not put the battery to fire, do not disassemble it or change it.

Powerbank function

After connecting the USB cable to the USB input, it is possible to charge the batteries of portable devices with the charging parameters USB (5 V DC/1A), for example, smartphone or tablet

Charging procedure:

1. Unfold the connector cover so that the power connector is visible and connect the power cable.
2. When charging, all the red LEDs on the back of the flashlight gradually flash. As soon as the flashlight is fully charged, all 4 red LEDs light up.
3. After charging, disconnect the power cable and close the cover so that water, humidity, or dust do not enter the lamp



Do not dispose of electrical appliances as unsorted municipal waste, use the collection points for sorted waste. For up-to-date information on collection points, contact your local office. If electrical appliances are stored in landfills, hazardous substances can seep into the groundwater and enter the food chain, harming your health